



Tucson Amateur Packet Radio
8987-309 E. Tanque Verde Rd #337
Tucson, Arizona • 85749-9399
Office: (940) 383-0000 • Fax: (940) 566-2544
Internet: TAPR@TAPR.ORG • www.tapr.org
Non-Profit Research and Development Corporation



TAPR CompactFlash Adapter II

This document was written February 2001. ©2001 Tucson Amateur Packet Radio Corp.

Reproduction or translation of any part of this work beyond that permitted by sections 107 or 108 of the 1976 United States Copyright Act (or its legal successor) without the express written permission of Tucson Amateur Packet Radio Corporation is unlawful except as noted below. Requests for permission to copy or for further information should be addressed to Tucson Amateur Packet Radio Corporation. Except as noted above, permission is hereby granted to any nonprofit group or individual to reproduce any portion of this document provided that:

the reproduction is not sold for profit; the intent of the reproduction is to further disseminate information on Amateur Packet Radio; the reproduction is not used for advertising or otherwise promoting any specific commercial product; full credit is given to Tucson Amateur Packet Radio Corporation (including address) as the original source of information; and Tucson Amateur Packet Radio Corporation is notified in writing of the reproduction.

CompactFlash is a trademark of the CompactFlash Association.

The information contained in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Tucson Amateur Packet Radio Corporation (TAPR) reserves the right to make changes in any products to improve reliability, function or design without obligation to purchasers of previous equipment. TAPR does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey license under its patent rights or the rights of others.

Introduction

Since PCs have become a generic and low cost way to provide network nodes and switches, amateur radio operators have been placing them in environments which were never meant to see a consumer PC operate in. One of the most significant problems encountered with ruggedizing a PC for remote network operation is the hard drive.

When amateurs first incorporated hard drives into our node in the 1980's, older MDM based drives worked in all sorts of horrendous conditions without fail. As times changed, so did hard drives. Newer IDE drives introduced problems related to temperature conditions that the older drives didn't have. Add to this the fact that some of these network nodes get installed in locations that do not allow the most convenient access - like on top of 1500 foot towers or on buildings that have difficult access when we need to fix an outage. Thus, it is important to do as much as possible to reduce the MTBF (mean time between failure) of any aspect of the node.

Over the years at conferences and gatherings, the conversation would turn to how to go about getting PCs to work reliably in remote locations without

costing a fortune doing so. That the power supply and hard drive were the major issues involved was obvious from the start. The power supply issue has been solved over the years as prices for industrial supplies to run PCs off 12volts have dropped.

So, the focus needed to be on the hard drive. About the same time as we started our project, the Linux Router Project was focused on a distribution of Linux small enough to fit on a single 1.44MB floppy disk making building and maintaining routers, terminal servers, and typically embedded networking systems next to trivial (<http://www.linuxrouter.org/>). One problem with their approach was that it didn't answer the question for those that wanted to run other network OSs like FlexNet, NOS, or whatever in their remote node.

The solution was to come in 1998 and be a TAPR kit in 1999. The original adapter has now been redesigned to use a Type II CF socket and utilize the DMA features of such products as the IBM Microdrive (TM). It will also allow the installation of a 44 pin, 2mm pitch, connector such as used for laptop IDE drives.

What is it?

A small circuit board which has a socket to accept a Type I or Type II Compact Flash(TM) memory cards. It also has an IDE drive connector and power connector to interface to the computer.

What does it do?

It allows one to build a diskless PC system. The Compact Flash card provides 100% hard drive emulation.

How do you use it?

You plug in power and IDE cables from your PC and plug in a Compact Flash card. Initialize the Compact Flash card and install the operating system just as you would a regular hard drive.

What operating systems may I use?

Both Linux and DOS 6.22 have been tested. The only theoretical limitation is the Compact Flash card capacity. e. g. Windows 95 wouldn't fit on an 8Mb Compact Flash card, however sizes are increasing, and you may be able to squeeze a custom W9x installation on a CF card these days.

Where do you get the Compact Flash card?

At any store that carries digital cameras or digital camera accessories.

Where do you get the flash adapter?

From TAPR.

ACKNOWLEDGMENTS

The Tucson Amateur Packet Radio (TAPR) Compact Flash Adapter project was a result of the efforts of the following people:

John Koster, W9DDD (w9ddd@tapr.org)
Project Manager, Hardware Design

Allen Finne, KB5SQK (dallen@cei.net)
Linux guru

Ed Geiger, KD4AB (egeiger@unitedmechanical.com)
Additional Linux help

The Hardware

There isn't much required. To use the adapter, you need the following:

- A CompactFlash card (size depends on the OS and applications to be loaded)
- A spare connector on your IDE ribbon cable
- An unused power connector compatible with the common 3.5" floppy drive
- A place to mount the card

It is possible to operate with as little as an 8Mb CompactFlashTM card. Prices keep falling. Size requirements will depend on the OS (operating system). DOS will probably take the least; you probably can't afford the size required for W95 or W98! (you can use any OS that will work with a standard HD)

If both the primary and slave connectors are already in use, you will need to add a secondary IDE controller. Typically your target system will not have any other HD; however, your development host may already be full. Note if you load your software onto the CF card on one system and move to another be sure to use the same CHS parameters in the new system as was used when you loaded the software on the original system.

The power connection is fairly straightforward - be sure red wire is connected to pin 1. It IS possible to force the connector on backwards.

As to mounting, it is suggested that the adapter may be attached to any flat surface within the enclosure or case with double-sided tape. (The heavy duty type such as used for hanging pictures, etc.) Alternatively one could take a flat piece of sheet metal or thin plastic sheet and make a mounting plate to fit into a 5.25" or 3.5" drive bay.

The Software

While Linux has been used as the preliminary testing of the concept, any other NOS or amateur switch software should work on the card.

You can read and write from the Flash, but if the application allows, simply use a RAM disk to store information. The project will be looking for comments from others as they get their specific applications installed and working on the device.

Once you have the hardware mounted, IDE and power cables attached, it is time to load the OS. We'll use DOS installation as an example. You can use one of two methods. One is to hook up the adapter as a slave drive on an operating computer. The other is to use your target system with floppy drive attached. You will need to set the master/slave jumper on the adapter to correspond to its position within the system. If you load the software on a host system and then move the adapter to a target system, don't forget to change the jumper setting (most likely install it) to correspond to the new configuration.

First, you must set the CMOS to recognize the new 'HD'. Most modern BIOS' will autodetect the number of cylinders, heads, and sectors per track (CHS) of your CompactFlash™ memory card. If your BIOS won't autodetect, you may have difficulty finding out what the CHS configuration of your card is. You may be able to get this information from your vendor, but the quickest way would probably be to temporarily install the adapter and card in a system that has a newer BIOS. Table 1 shows a few examples.

Note that most modern BIOSes that autodetect will give you three choices. They are Normal, Large, and LBA (perhaps you might run into other terminology on some systems). Usually they default to LBA. We would recommend selecting Normal until such time as the CF cards are available in sizes that have more than 1024 cylinders. The reason is that your target system may not support all the same IDE modes as the development system. If you are loading software on one system and then transferring the CF card and adapter to another, then be sure you use the same CHS parameters on both systems.

Assuming you have a target system with a floppy, you would simply put the boot diskette in the A: drive and boot the system.

- Run FDISK to create a DOS partition and make it bootable
- Run FORMAT C: (or other drive letter if applicable)
- If you have a later version of DOS, run setup to complete installation, otherwise:
- Run SYS C:
- Copy other DOS command files and utilities needed to the 'HD'

The other OS installations have similar steps.

It has been reported that sometimes there are problems having two IDE devices on the same cable as the TAPR CF Adapter. We think this is isolated to certain versions of Linux. A look at ide.c source codes shows that there is an attempt to identify any CF cards in the system (to what purpose ?) and if found make the assumption that there will only be one device on that IDE cable. A common solution is to disconnect the other harddrives completely when wanting to try and boot off the FlashCard. If your target system needs two devices on the IDE cable, then you'll have to make changes in ide.c, rebuild the module and the kernel.

N. B. We have seen reports of Linux fdisk making CompactFlash<SU>™</SU> unuseable when run on a CF card connected directly with an adapter such as the TAPR CFA. We've seen no details concerning version of fdisk or brand/size of CF card involved. We can only report that we've not had a problem here or received such a report from any purchasers of the TAPR CFA.

Other Information Sources

The CompactFlash Association web has some good information as well as links to sites of manufacturers who make the cards and related products.

<http://www.compactflash.org>

The following additional URLs describe systems using pared down Linux systems for operation from limited storage. Any of these approaches could be used to fit Linux on a CompactFlash TM of modest size.


<http://www.freesco.org/>
<http://cd3.wiredglobal.com/>

Table 1 - CompactFlash Drive CMOS Setup Parameters

Capacity	Sectors/Card	Heads	Sectors/Track	Cylinders
2 MB	3,936	2	16	123
4 MB	7,872	2	32	123
6 MB	11,776	2	32	184
8 MB	15,680	2	32	245
10 MB	20,480	2	32	320
15 MB	29,312	2	32	458
20 MB	39,168	2	32	612
24 MB	46,976	2	32	734
30 MB	58,752	6	32	306
40 MB	78,336	4	32	612
48 MB	93,952	4	32	734

Drill tape data.			
Tool Code	Hole Size	Sym bol	Hole Count

Place to install optional 44 pin, 2mm pitch, connector

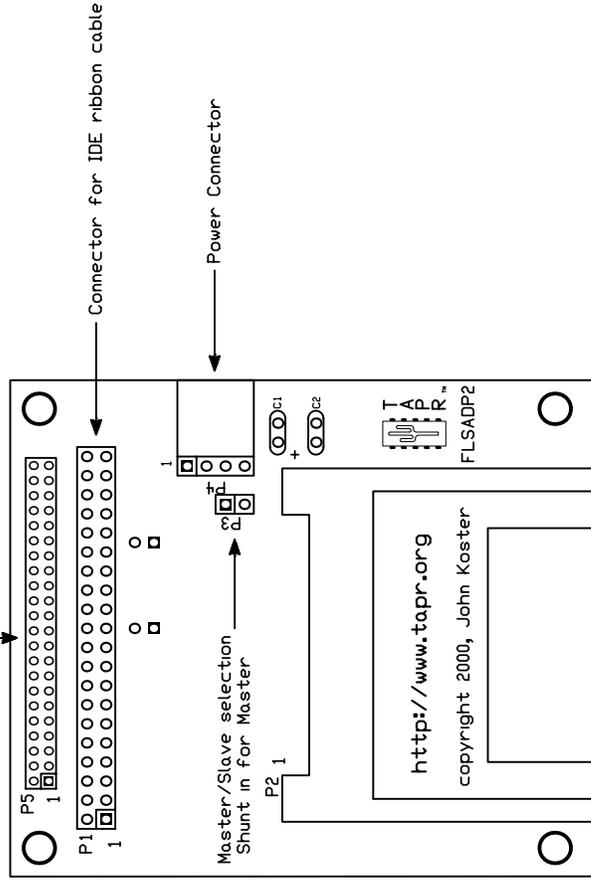

Board type: FR4
 Board thickness: .062"
 Copper weight: 2oz

All dimensions are in inches.

Board should have green solder mask over solder with white silk screening on top.

View is from top side of the board.

Co:	TUCSON AMATEUR PACKET RADIO, INC.
Title:	COMPACT FLASH ADAPTER - TYPE II
Board:	FLSADP2
Revision:	A
Drawn:	JOHN KOSTER, W9DDD
Size:	A
Date:	6/14/2000
Sheet	1 of 1